


# Quinton Q Stress Cycle Interface Notes

You can setup the Cycle with your stress system using the following directions. You will need the RS-232 cable specified below. It establishes communication between the monitor and your stress system. This cable allows your stress system to prompt the monitor when it needs a BP measurement. In addition, it allows the BP measurements taken by the Cycle to be transferred to your stress system display and reports.

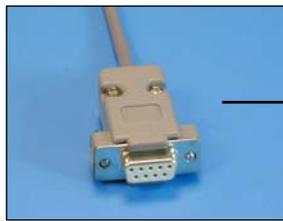

RS-232 cable  
Part# 91-0013-00



Cycle  
Connector Panel

## 1. Plugging in the RS-232 cable

Connect: the RS-232 cable, SunTech part #91-0013-00 (9 pin female to 9 pin female)

From: the RS-232 connection on the connector panel of the Cycle (9 pin female)

To: the COM2 connection on the back of the stress system (9 pin female); the connection may not be labeled, but it is the only 9 pin male connection on the back of the stress system

## 2. Setting up the Cycle monitor

- From the measurement view, press and hold the **SELECT** and **ADVANCE** buttons simultaneously for 3 seconds. The System Menu will be displayed.
- Press the **MENU** button once to proceed to the Communication Screen. Press **ADVANCE** until *Q Stress* is displayed.
- Press **MENU** twice to return to the measurement view.

## 3. Setting up the Q Stress

- On the desktop, double click the **Quinton Q Stress** icon.
- Select **Setup**.
- Select **System**.
- Click on the **Device Setup** tab.
- In the Available Devices window, select **BP Monitor**.
- Click on the right arrow next to COM2 to select **BP Monitor** for COM2.
- Choose **Save**.
- Choose **Close**.
- Use the **F10** key to initiate BP readings.