


Philips Stress Vue Cycle Interface

You can setup the Cycle with your stress system using the following directions. You will need the RS-232 cable specified below. It establishes communication between the monitor and your stress system. This cable allows your stress system to prompt the monitor when it needs a BP measurement. In addition, it allows the BP measurements taken by the Cycle to be transferred to your stress system display and reports.

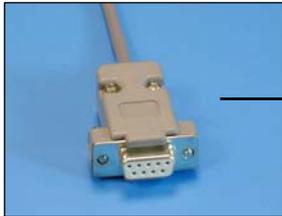

RS-232 cable
Part# 91-0013-00




1. Connecting the RS-232 cable:

Connect: the RS-232 cable, SunTech part #91-0013-00.

From: the RS-232 connection on the connector panel of the Cycle.

To: the COM 2 port on the back of the Stress Vue.

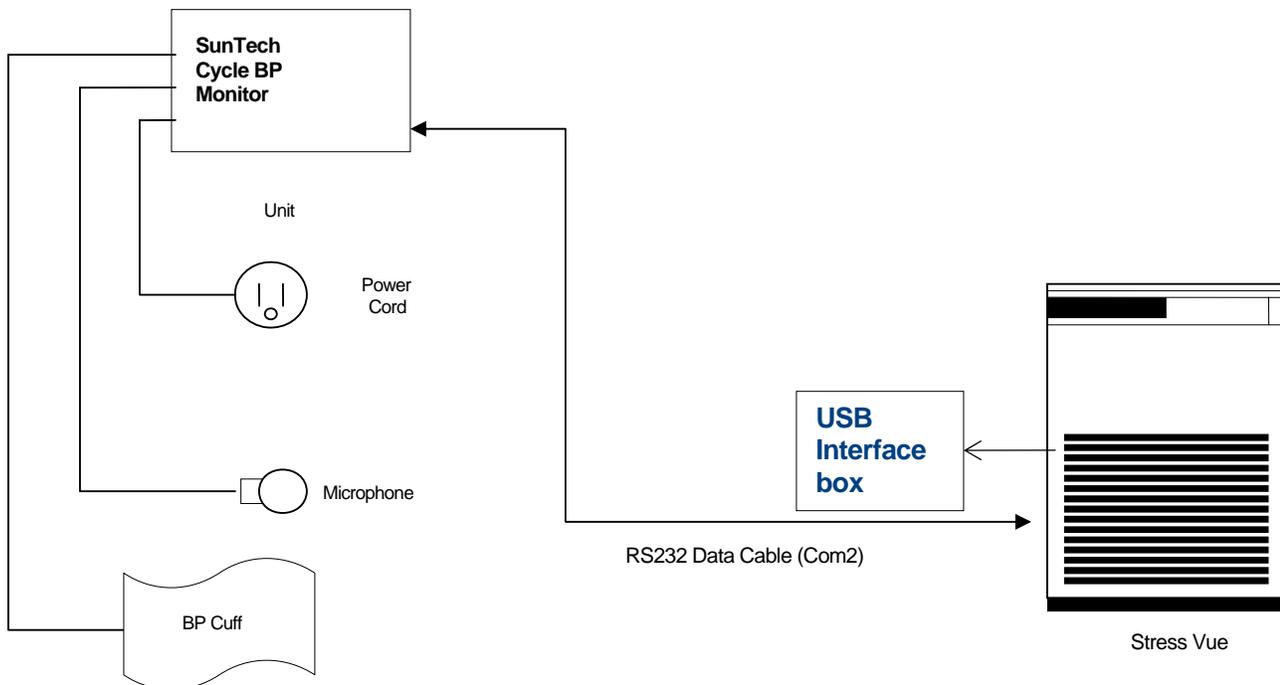

Setting up the Cycle monitor

- a. From the measurement view, press and hold the **SELECT** and **ADVANCE** buttons simultaneously for 3 seconds. The System Menu will be displayed.
- b. Press the **MENU** button once to proceed to the Communication Screen. Press **ADVANCE** until *Stress Vue* is displayed.
- c. Press **MENU** twice to return to the measurement view.

2. Setting up the stress system:

- a. Select **Configure**.
- b. Click on the **Exercise** tab.
- c. Click **NIBP**.
- d. Choose **SUNTECH TANGO**.
- e. Click on **Save Profile**.
- f. Click **Yes**.
- g. Click on **Done**.

During the test, click on the BP button or press F3 to prompt a BP. Please note that the first measurement taken by the Cycle during the test does not automatically transfer to the stress system software. All subsequent measurements will transfer as expected.